


# Functions Guide

H.AO

# Quick Settings

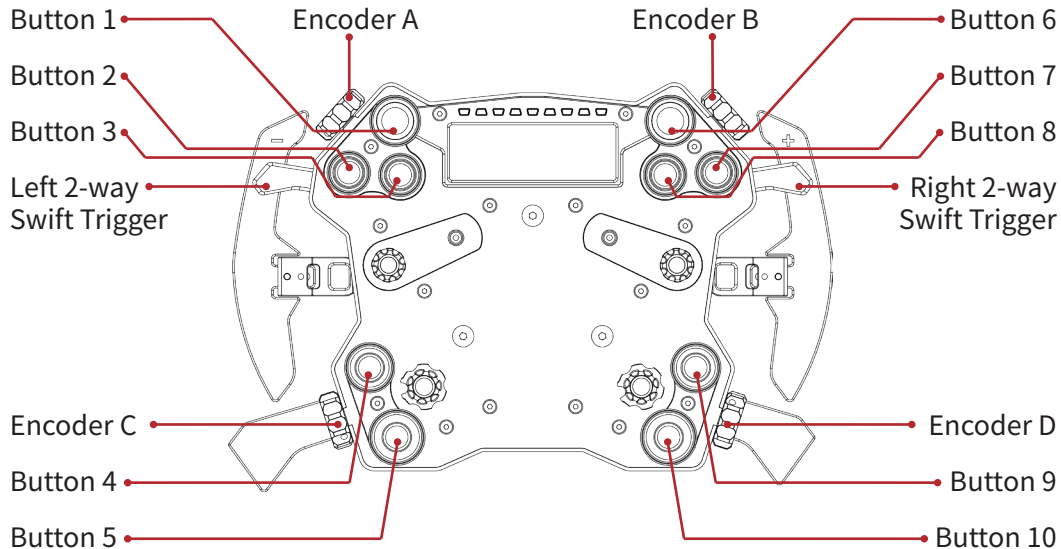

- **Switch the Style of Display:**

Rotate [Encoder D] to switch the style of display.

- **Enter the Light & Display Setting Mode:**

Pull and hold [Right & Left 2-way Swift Triggers] until all the shift lights turn white to enter setting mode. The shift lights will then light up in green.

Push and hold [Right & Left 2-way Swift Triggers] until only one shift light is on to exit setting mode.

- **While Under Setting Mode:**

- **Adjust Color of Button Lights (single button):**

Press a certain button to adjust its color.

- **Adjust Color of Button Lights (overall):**  
Pull or push [Right 2-way Swift Triggers] to adjust overall color of buttons.
- **Adjust Brightness of Display:**  
Rotate [Encoder A] to adjust brightness of display.
- **Adjust Brightness of Shift Lights:**  
Rotate [Encoder B] to adjust brightness of shift lights.
- **Adjust Brightness of Button Lights:**  
Pull [Left 2-way Swift Triggers] to increase, and push to decrease the brightness of buttons.
- **Switch Mode of Buttons:**  
Rotate [Encoder C] only one notch, all the buttons will flash, then exit the setting mode, and the buttons won't light up unless you press them.

**CONSPIT**

The logo features the word "CONSPIT" in a bold, italicized, white sans-serif font. Below the text are two parallel white horizontal lines that taper off to the right, creating a sense of motion or a stylized underline.

[WWW.CONSPIT.COM](http://WWW.CONSPIT.COM)